Register your product and get support at

## **VOICE TRACER**







VTR5100 説明書 / User Manual

26



#### P.01 P.02 P.03 P.03 P.04 【電源のオン / オフ】 P.05 P.05 P.05 P.06 誤動作防止(ボタンホールド) P.07 【録音 / 音楽ファイルの再生】 P.07 P.07 P.08 P.09

P.09

P.10

P.11

P.11

P.12

P.12

【システム設定】	P.13
録音形式設定	P.14
録音 LED 設定	P.14
操作音設定	P.15
VA 録音 ( 音声認識録音 )	P.15
自動分割録音	P.16
日時設定	P.17
予約録音	P.18
録音時間設定	P.19
言語設定	P.19
バックライト設定	P.20
コントラスト設定	P.20
自動電源オフ	P.21
録音残余時間	P.21
メモリ初期化	P.22
ファームウエア	P.22
【故障かも…と思ったら】	P.23
【アフターサービス】	P.24
【お問い合わせ/サポート】	P.25
【製品仕様】	P.25

【付属品】

【各部名称】

【音声録音】

基本操作

基本操作

表示画面の説明

表示画面の説明

A-B 間リピート

VOL( 音量 ) 調整

イコライザー設定(音楽再生モードのみ)

音楽ファイルの取り込み方法

データの削除

リピート設定

フォルダ構造

【充電をする】

【ご使用の前に】

【安全上のご注意】

## 【ご使用の前に】

使用中に発生した不慮のデータロスに関しては、当社は一切責任を持ちません。重要な録音データはバックアップを取るなどの処理をお願いいたします。

長期間使用しない場合、バッテリーが完全に放電し充電出来なくなる場合がありますので、本機を長時間使用しない場合 でも、半年ごとに 3/4 程度まで充電するようにしてください。

▲警告

## 【安全上のご注意】

ここに示した注意事項は、製品を安全に正しくお使い頂き、お使いになる人や、他の人への危害、財産への損害を 未然に防ぐものです。また危害や損害の大きさと切迫の 程度を「警告」「注意」の2つに区分しています。いずれも安 全に関する重要な内容ですので必ず守ってください。

### 絵記号の意味



#### ▲ 警告 ▲ 警告 子供だけで使用したり、乳幼児の手の届くところに保管しないでください。 運転中には使用しないでください。 子供だけで使用したり、乳幼児 けがや感電の原因となります。 交通事故の原因となります。 強い衝撃を与えたり、機器が壊れた状態で使用しないでください。 、分解・改造はしないでください。点検や修理は修理受付窓口へご依頼く $\bigcirc$ 火災や感電の原因となります。 ださい。けがや感雷の原因となります。 運転中などを含め、危険な状況が予想される場所ではご使用を控えて下 運転中 さい。 ▲ 注意 ▲ 注意 はじめからボリュームを上げすぎないでください。突然大きな音が出て、耳 0 $\bigcirc$ ペースメーカーなど医療機器を使用している場合は事前に医師に相談 を痛める原因となります。 てください。 医療用電気機器に影響を与えることがあります 汚れたときは、柔らかい布で乾拭きしてください。シンナーやベンジンは 強い衝撃を与えたり、機器が壊れた状態で使用しないでください。 $\bigcirc$ 火災や感電の原因となります。 使用しないでください。 本体表面を傷めることがあります 航空機内での使用は、航空会社の指示に従ってください。 $\bigcirc$ 極端に熱くなる場所、直射日光が当たる場所に放置しないでください。 誤動作による事故の原因となることがあります 適切以上の音量で長時間の使用はお控え下さい。

この表示を無視して誤った取り扱いをすると、死亡または

重傷を負う可能性が想定される内容を示しています。

▲ **注意** この表示を無視して誤った取り扱いをすると、傷害を負う 可能性が想定される内容を示しています。



本製品をお使いになる前に、付属品 を確認してください。万が一不足して いる物や破損しているものがある場 合は、お買上げ店又は弊社サポート センターまでご連絡下さい。



## 【各部名称】



# 【充電をする】

3

ご使用前に本製品の充電を行ってください。 充電が開始されると電 Δ 池アイコンの電池残量 本機の電源をオンにします。 が増減し、充電中である 事が表示されます。 2 本体側面のMiniUSBポートに、付属ケーブル のMiniUSBプラグ側を挿します。 雷池残量 パソコンで充電をする場合 起動したパソコンのUSBポートに、付属ケーブルの 5 充電が完了すると電池 USBプラグ側を接続します。 残量の増減が停止しま Ø MiniUSB ケーブル す。充電完了後、本機か らUSBプラグを取り外 します。 ※充電中本機の操作は出来ません。 ACアダプタ(別売)で充電をする場合 ※約3時間でフル充電となります。 ACアダプタ(別売)のUSBポートに、付属ケーブル のUSBプラグ側を接続します。 本機は電源オフの状態では充電 されません。必ず電源をオンにし



......

<

て充電を行ってください。

## 【 雷源のオン / オフ 】







### 電源オフ

PHILIPS

本機側面の電源スイッチを、オフの方向にスラ イドします。液晶画面の表示が消え電源がオフ となります。

## 【音声録音】

#### 基本操作

### 本機の電源をオンにします。

**9 停止ボタンを短く押して、**録音データを保存 するフォルダをA~Dの中から選択します。 **停止ボタンを押すたびに**A→B→C→D→音楽 フォルダの順にフォルダが切り替わります。 ・音楽フォルダへの保存はできません。 ・フォルダにはそれぞれ最大99ファイル(合計で396 ファイル) まで保存できます

## **3 録音ボタンを押すと録音**が開始します。

 ・録音が開始するとLEDランプが赤色に点灯します。 ※LEDランプON設定のときのみ赤色点灯。オフでは点灯しません。 →P14参照

- ・本機上部にあるマイクを、録音する音源の方向に向け てください。
- ·VA録音(音声認識録音)設定がオンになっていると、 本機が音声に反応するまで録音が開始されません→ P15参照

4 録音中に**録音ボタンを押すと録音が一時停** 止します。再度、録音ボタンを押すと録音が 再開します。

・一時停止中はLEDランプが赤色に点滅します。 ※LEDランプオン設定のときのみ赤色点滅します。オフでは点滅 しません。→P14参照

5 録音を終了するには、停止ボタンを押します。 録音が終了し、録音ファイルが 2 で指定し たフォルダに保存されます。

·終了するとLEDランプが消灯します。 ・保存データが使用可能な容量を超えるか、録音ファ イルが396に達すると録音は停止します。再度録音を 再開するにはファイルの一部を削除するか、パソコン に移動をした後ファイルを削除し空き容量を確保して ください。

 ・録音中に本機の電源をオフにしないで下さい。録音 ファイルの破損の原因となります。

※本機では3種類の録音フォーマットが選択できます。希望する 録音フォーマットを事前に選択してください。→P14参照 ※録音中に■■ボタンをおすと、その時点までの録音ファイルが 保存され、続いて次の録音が始まります。

## 【音声録音】

## 【録音 / 音楽ファイルの再生】

表示画面の説明

### 誤動作防止(ボタンホールド)

音声録音中、誤動作防止をしていると誤って ボタンが押されても動作しません。



- A-B間 ファイ 総ファ 8081 A 録音出 00:00:38
- 3 誤動作防止を解除するには、
   再度メニューボタンを2秒
   以上長押しします。



・ファイル名の後には、録音した日時が表示されます (タイムスタンプ機能)

列)REC001	. MP3	2018/01/01 08:29
ファイル名	録音形式	録音日時

## 【録音 / 音楽ファイルの再生】

## 電源を**オン**にします。

2 停止ボタンで再生したいファイルがある フォルダを選択します。停止ボタンを押す たびにA→B→C→D→音楽フォルダの順に フォルダが切り替わります。

基本操作

・メニューボタンを押すと、録音再生フォルダと音楽
 再生フォルダが切り替わります。

3 **▲∢***ボ***タン**又は**▶∛***я***り**で再生したいファイルを選択します。

### 4 再生ボタンを押すと再生が始まります。

・再生中はLEDランプが緑色に点灯します ・一時停止中はLEDランプが緑色に点滅し、停止する と消灯します。

#### 【再生中に可能な本機の動作】

▶ II ボタン	短押し	再生/一時停止
■ ボタン	短押し	停止
■ ボタン	長押し	イコライザー設定 (音楽再生モードのみ) →P11 をご覧ください
▶▶ ボタン	短押し	前のファイルへ移動
▶ ボタン	短押し	次のファイルへ移動
▶▶ ボタン	長押し	早戻し
▶ ■ ■ ■ ■	長押し	早送り
VOLボタン	短押し	A-B 間リピート再生 →P9 をご覧ください
VOLボタン	長押し	音量設定 →P9 をご覧ください
<b>袋</b> ボタン	短押し	リピート設定 →P11 をご覧ください
袋 ボタン	長押し	システム設定 →P13 をご覧ください

## 【録音 / 音楽ファイルの再生】

・リピートを終了しない場合で も、5回再生後に自動的に終

てします。



## 【録音 / 音楽ファイルの再生】

#### データの削除

削除するファイルの再生を停止します。 ・削除する前に削除したいファイル/フォルダを選 択しておきます。

**2 停止ボタンを2~3秒長押し**ます。

3 再生/一時停止ボタンを押すと、ファイル/ フォルダの選択ができます。



します。 ※白背景に黒文字が選択しているコマンドです。 (上記図では「No」を選択中)

5 メニューボタンを押すと削除が完了します。

## 【録音 / 音楽ファイルの再生】

#### リピート設定

再生中に**メニューボタンを短く押し**ます。

2 ボタンを押すたびに下記のモードに切り 替わります。(アイコンは液晶画面の上部 左側に表示されます。)

再生モ <b>ー</b> ド	アイコン	動作
ノーマル再生	Ĵ	全てのファイルを順番 に再生し、最後のファ イルにて停止します。
1曲リピート		ファイルを繰り返し再 生します。
全曲リピート	(ALL)	フォルダ内全てのファ イルを順番に繰り返 し再生します。

### イコライザー設定(音楽再生モードのみ)

※イコライザー設定が出来るのは音楽再生モードのみです。

- 再生中に**停止ボタンを約2~3秒間長押し** します。
- 2 モードは下記の中から選択できます。

・アイコンは液晶画面の中央右側に表示されます。
 ・停止ボタンを約2~3秒間長押しする度にモードが切り替わります。

アイコン	動作
NOR	ノーマル
ROCK	ロック
РОР	ポップ
SOFT	ソフト
JAZZ	ジャズ
CLAS	クラシック
DBB	重低音

## 【録音 / 音楽ファイルの再生】

#### 音楽ファイルの取り込み方法

※本機での再生可能音楽ファイルはMP3のみとなります※音楽データの作成方法は、ご使用のパソコンやソフトにより変わります。ご使用のパソコン・ソフトメーカーにご確認下さい。

 本体側面のMini USBポートに同梱ケーブル のMiniUSBプラグを差します。



- **2** パソコンのUSBポートにUSBプラグを差します。
- 3 本機の「MUSIC」フォルダ内に音楽ファイ ルを入れます。

※MUSICフォルダ内の階層は認識しません。音楽ファイルは必 ず直接「MUSIC」フォルダ直下に入れてください。

4 音楽ファイル転送後、本機をパソコンか ら取り外します。

### フォルダー構造

Windows ファイルエクスプローラーで表示される本機のフォルダー構造を事例として以下に示します。

録音されたファイルは「VOICE」フォルダー内の 「A」「B」「C」「D」いずれか(録音時に指定した フォルダー内)に保存されています。 また、音楽ファイルは「MUSIC」フォルダー内に コピーしてご視聴下さい。



- **1 メニューボタンを2~3秒長押し**するとシ ステム設定画面が表示されます。
- 2 メニューボタンを押すたびに、 設定メニューが切り替わります。
- 3 **◀◀ボタン**又は▶▶ボタンにて、モードの 切り替えを行います。
- **4 メニューボタンを短く押す**と設定が完了し、次のメニューを表示します。
- 5 元の画面に戻るには**停止ボタンを押し**て下 さい。

※設定途中で停止ボタンを押すと変更した項目は保存されません。設定を保存するにはメニューボタンを押してください。

設定メニュー	モード			詳細			
録音形式	HQ		LF	P		NR	P14
録音 LED	オン			オフ		7	P14
操作音	オン			オフ		7	P15
VA 録音	オン			オフ		,	P15
自動分割録音	オフ		30	分		60分	P16
日時設定	12H			24H			P17
予約録音			_	-			P18
録音時間設定	0分	30	)分	60分 120分		120分	P19
言語	Engli	sh		日本語		語	P19
バックライト	オフ1	5利	30	1秒 45秒 60秒		り60秒	P20
コントラスト	1~9			P20			
自動電源オフ	5分		15分			P21	
録音残余時間	_			P21			
メモリ初期化	はい		いいえ		τ <b></b>	P22	
ファームウエア	_			P22			

【設定メニュー/モード一覧】

## 【システム設定】

	録音LED設定
Œ	録音中のLEDランプの動作を 設定します。
HQ 録音形式	オン 録音LI
	Œ HQ 録音形式

【下記の3つから選択を行い、メニューボタンを短く押すと決定します】

モード	ビットレート	拡張子	特徴
LP	8kbps	MP3	並音質 録音ファイル / サイズが小さい
HQ	128kbps	MP3	普通音質 中程度の 録音ファイル / サイズ
NR	384kbps	WAV	最高音質 録音ファイル / サイズが大きい

#### 【オン/オフの選択を行い、メニューボタンを短く押すと決定します】

モード	動作
オン	録音時LEDランプが点灯します
オフ	録音時LEDランプは消灯します



【オン/オフの選択を行い、メニューボタンを短く押すと決定します】

モード	動作
オン	操作音をオンにします
オフ	操作オンをオフにします

【オン/オフの選択を行い、メニューボタンを短く押すと決定します】

モード	動作
オン	音声自動録音をオンにします
オフ	音声自動録音をオフにします

## 【システム設定】



【下記の3つから選択を行い、メニューボタンを短く押すと決定します】

モード	動作
オフ	自動分割オフ
30分	30 分毎に分割して録音を行います
60分	60 分毎に分割して録音を行います



- 2 12H/24Hを**◀◀ボタン**又は**▶▶ボタン**で 選択し、**メニューボタンを短く押し**ます。
- 4 ◀◀ボタン又は▶▶ボタンにて変更し、VOL ボタンで次の項目に移動します。
   ·西暦→月→日→時間→分→秒の順番で同じ方法で設 定します。
- 5 メニューボタンを短く押すと、設定が完了します。

【システム設定】

#### 予約録音

指定した時間に自動的に録音を開始します。

※電源がオフの際、タイマーは起動しませんのでご注意ください。 ※「日時設定」で設定した12H/24H表示方式で表示されます。 →P17参照



### 1 設定メニューで**予約録音**を選びます。

**2** VOLボタンを短く押し、タイマーが作動す る西暦の設定を行います。

3 ▲▲ボタン又は▶▶ボタンにて変更し、VOL ボタンで次の項目に移動します。
・西暦⇒月⇒日⇒時間⇒分⇒秒の順番で同じ方法で設 定します。

4 3 を繰り返し、希望の日時に合わせます。 設定を完了するにはメニューボタンを短く押します。



Ŧ

【下記の4つから選択を行い、メニューボタンを短く押すと決定します】

モード	動作
0分	手動で停止 / 保存をするまで、録音は停止しません。
30分	録音開始から 30 分後に録音を停止 / 保存します。
60分	録音開始から 60 分後に録音を停止 / 保存します。
120分	録音開始から 120 分後に録音を停止 / 保存します。

【下記の2つから選択を行い、メニューボタンを短く押すと決定します】

-F	動作
nglish	英語で表示します。
1本語	日本語で表示します。

## 【システム設定】

バックライト設定		コントラスト設定			
一定時間本機を使用しな い場合に、液晶画面のバッ	GE	液晶画面のコントラストを 設定します。	G		
クライトが消灯するまで の時間を設定します。 ※消灯中も動作は継続します		1 ◀◀ボタン又は▶▶ボ タンを押して1~9の 間で設定を行います。			
	30秒 バックライト	<b>2 メニューボタンを短く押</b> すと設定が完了します。	5 コントラスト		

【下記の5つから選択を行い、メニューボタンを短く押すと決定します】

モード	動作
オフ	バックライトを常時オンにします。
15秒	無操作の場合 15 秒後に消灯します。
30秒	無操作の場合 30 秒後に消灯します。
45秒	無操作の場合 45 秒後に消灯します。
60秒	無操作の場合 60 秒後に消灯します。



## 【システム設定】

移動します。

初期化をキャンセルし、次のメニューへ

メモリ初期化		ファームウエア	7
本機を初期化する際に使用し ます。	æ	ファームウエアのバージョ ンを確認します。	
※初期化を行うと全てのデータが消去され ます。重要なデータやファイルは必ず バックアップを行ってください。			
※必ず本機にて初期化を実施ください。			FW 1.1
※初期化後、本機にて録音フォルダを選択 するとVOICEフォルダが自動作成され、 音楽フォルダを選択するとMUSICフォル ダが自動作成されます。	いいえ メモリ初期化		20180101 VTR5100 ファームウェア
【ト記の2つから選択を行い、メニューホタンを	短く押すと決定します】	1	
モード 動作			
はい本機を初期化します。			



## 【故障かも…と思ったら】

電源が入らない				
すぐに電源が切れてしまう	・バッテリーが空の可能性があります。本機の允電を行ってくたさい。			
動作しない	<ul> <li>・ボタンがホールドされていませんか?画面にホールドマークが出ていないかご確認ください。</li> <li>・リセットを行います。再生/一時停止ボタンを長押しすると電源がオフとなります。</li> </ul>			
パソコンに認識されない	・接触不良の可能性があります。USBケーブルを抜いて、再度しっかりと挿入してください。 ・同梱のUSBケーブルで無いと本機のフォルダやファイルにアクセス出来ません。			
音楽ファイルが 再生されない	・対応以外の音楽フォーマットは再生できません。 ・「著作権あり」設定がされた音楽ファイルは再生できません。 ・音楽ファイルをフォルダに入れて、本機MUSICフォルダに入れていませんか? 直接本機の「MUSIC」フォルダの直下に入れないと再生ができません。			
音が出ない	・音量がゼロになっていませんか? ・イヤホン (ヘッドホン) が端子にしっかりと挿されているかご確認ください。			
初期化後PC上で確認 すると、MUSICフォルダ が消えている	・PCから本機を外した状態で停止ボタンを押し音楽再生フォルダを選択すると、フォルダが 自動作成されます。もしくはPCにて、MUSICフォルダを作成してください。			

## 【アフターサービス】

修理を依頼される前に@P23ページの「故障かも・・・と思ったら」をよくお読みいただき、症状を確認してください。 確認しても症状が改善されない場合は、お買上げ店または弊社カスタマーサポートにご相談ください。

#### ■保証書を必ずご確認ください ※本機を分解すると、保証が無効になります。

保証書については、必ず「お買上げ日」と「正規販売店名」の記入があることを確かめてからお買上げ店よりお受け取りください。また、内容をよくお読みの後、大切に保管してください。保証期間はご購入日から1年間です。

弊社では、お客様からの「製品の使い方や仕様に関するご質問」「有償修理のご依頼」には対応しておりますが、保 証期間内での「返品・交換・無償修理」は正規販売店経由でのみ行なっております。返品などをご希望の方は、ご購 入された販売店までお問い合わせください。どうぞよろしくお願いいたします。

### ■修理をご依頼される場合

修理を依頼される前に☞P23ページの「故障かも・・・と思ったら」をよくお読みいただき、症状を確認してください。 それでも症状が改善されない場合は、まず電源プラグを抜いてお買上げ店または弊社カスタマーサポートにご連絡ください。 ※保証期間中は保証書の規定に従って、修理させていただきます。 ※保証期間を過ぎているときは、修理すれば使用できる場合、ご希望により有償修理させていただきます。

#### ■修理をご依頼されるときにご準備いただきたい内容

●お客様の氏名 / 住所 / 電話番号
 ●製品名 / 型番 / お買上げ日 / お買上げ店
 ●故障または異常の内容(できるだけ詳しく)

## 【お問い合わせ/サポート】

## 【製品仕様】

#### カスタマーサポート

(平日10:00~12:00 / 13:00~17:00)

## 2 0570-020-511

EX-JV Philips icrecorder@stayer.co.jp

〒160-0004 東京都新宿区四谷三丁目2番地2 TRビル6F

Speech Processing Solutions GmbH. Gutheil-Schoder-Gasse 8-12, 1100 Vienna, Austria JINGWAH DIGITAL TECHNOLOGY CO.,LTD

内蔵メモリ	8GB					
内蔵バッテリー	320mAh リチウムバッテリー					
充電時間	約3時間					
	フォーマット			録音可能時間		
録音形式	WAV	NR	384kbps	約 48時間		
30 LI 717 24	MDZ	HQ	128kbps	約 136時間		
	MPS	LP	8kbps	約2160時間		
録音時バッテリー 連続使用時間	12時間					
イヤホンジャック	φ3.5mmステレオ					
使用環境	温度:5℃~45℃ / 湿度10%~90% (結露なきこと)					
重量	約40g					
寸法	約 高さ97.6×幅22.7×奥行き14.8mm					
対応OS	Windows10/8/7/XP , Mac OS X10.5~10.10 , Linux					
付属品	本体、イヤホン、Mini USB-USBケーブル、 ポーチ、取扱説明書(保証書付)					

※充電時間、連続使用時間はあくまでも目安であり、使用状況・環境 によって異なる場合がございます。※製品の色は印刷物なので実際の色と異なる場合があります。※製品仕様および外観は、改良のために予告なく変更する場合があります。

### Content

_		
1	Welcome	27
	1.1 Product features	27
2	Important	28
	2.1 Safety	28
	2.2 Hearing protection	28
3	Your recorder	29
	3.1 What's in the box?	29
	3.2 Overview	29
4	Start to use	30
	4.1 Power on/off	30
	4.2 Battery charging	31
5	Recording	32
6	Voice & music mode	34
	6.1 Basic operations	34
	6.2 Delete	35
	6.3 A-B Replay	35
	6.4 Play mode	36
	6.3 Volume adjustment	36
	6.4 Equalizer Mode (for music mode)	36

#### 7 System settings 37 7.1 Quality settings 37 7.2 Record light 38 7.3 Key tone 38 7.4 Voice-activated recording 38 39 7.5 Auto divide recording 7.6 Set date & time 39 7 7 Record timer 40 7.8 Duration 40 7.9 Language 41 41 7.10 Display backlight 42 7.11 Display contrast 42 7.12 Auto power-off 42 7.13 Remaining recording time 43 7.14 Format memory 43 7 15 Information 8 Frequently asked questions 45 9 Technical parameters 46

### 1 Welcome

Welcome to the world of Philips! We are honored by your choice and purchase of Philips' products. You can have Philips' comprehensive technical supports from our website, e.g. user's manuals, software downloading and warranty information etc. www.philips.com

#### **1.1 Product features**

Digital noise reduction: Effectively filter the ambient noise in the recording environment and record clear sound, which is recommended to use in noisy environment. It's recording type is PCM Noise Reduction.

- HD loudspeaker: The adoption of high quality speaker allows you to experience natural sound during playback of recordings or music files as well.
- Record in MP3 format.
- Quick access to recordings and data by using high speed USB 2.0.
- Voice-activated recording.
- USB mass storage, ensuring maximum compatibility.
- Keylock function: Keylock function can prevent accidentally touch pause or exit button during recording.

### 2 Safety information

#### 2.1 Safety

- To avoid a short circuit, do not expose the product to rain or water.
- Do not expose the device to excessive heat caused by heating equipment or direct sunlight.
- · Protect the cables from being pinched, particularly at plugs.
- Attention! Before using the device please read this user's manual carefully. The company shall not be liable for any data loss due to erroneous operation or causes of a force majeure nature. Special attention should be given to careful operations and prepare backup of files.

#### 2.2 Hearing protection

Observe the following guidelines when using your headphones:

- Adjust to suitable volume; do not use the earphone for a long time.
- . Please do not turn the volume up beyond your tolerance.
- Do not turn up the volume so high that you can't hear what's around you.

- When in dangerous conditions, please carefully use the earphones or stop using.
- Do not use the earphones when driving, cycling and skateboarding to avoid traffic accident and violating laws and regulations.

### 3 Your recorder

#### 3.1 What's in the box?



#### 3.2 Overview:



1 Headset jack Ō Volume (VOL) 3 Menu key (MENU) 4567891 Power on/off (ON/OFF) USB dort Display Record, Play, Charging indicator Record, Pause 🔘 Speaker Play, Pause 🕨 (11) Volume up, Fast reverse, File selection previous, Menu item selection (12) Volume down, Fast forward, File selection next, Menu item selection (13) Stop, Folder selection (14)

Microphone jack (MIC)

### 4 Start to use

#### 4.1 Power on/off

### Note

· Please recharge the device for three hours before using it for the first time! (See also chapter 4.2 Charging battery, page 28.)

#### To power on/off,

- 1 Slide the on/off switch on the side of the device in the ON position.
- The device turns on and the start-up screen is displayed; the device starts automatically and then displays "PHILIPS", as shown below.



2 Press the ON/OFF switch to power the device on/off.

- If the device shall be idle for a long time, please slide the power switch to OFF position.
- If the device cannot work normally, please make sure the device is not out of electricity.
- When the device is recording, please do not cut off the power, otherwise damaged file or malfunction may be resulted
- When the battery indicator " 🚾 " is displayed, please charge the device promptly.
- Please charge battery in advance if you need to record for a long time. A fully charged battery will allow you to record for approx 6.5 hours.



#### 4.2 Battery charging

- 1 Prior to charging, please slide power switch to ON position.
- 2 Connect the device to PC through USB cable or use special charger to recharge.
- The battery indicator shows a battery icon turning from empty to full repeatedly, indicating that the device is recharging, with orange charging indicator being lit.
- The device can be fully charged in around 3 hours.
- The orange charging indicator is not displayed when the device is fully charged.

#### USB connection and charging interface:



When the power switch is slide to the OFF position, the battery symbol **•** will not be displayed.



#### Connect to computer

The device can be used as a USB mass storage to conveniently store, back up and move files. Link the device to a computer with a USB cable, the voice recorder can automatically be recognized as a portable device without the need to install any software.

### Note

• When moving files into or out of the device, please do not disconnect the device from the computer.

## 5 Recording

#### 2 Press REC button () to start recording,

 the red indicator light will be on and the display will show "REC"; please point the top of the device towards the source of sound.

#### 3 Press REC button o to pause recording,

- the red indicator light will flicker, and the display will show "Pause".
- 4 Press REC button 💿 again to resume recording.
- 5 Press STOP button to save recording,
  - red indicator light is turned off, and the device will return to the Stop interface of current recorded file.
- 6 Long-press menu button to realize lock screen which can avoid hitting pause or exit button. Long-pres menu button to release the lock.



(1)

2

(3)

(4)

(5)

6

(7)

(8)

(9)

• When the device is in a dormant state, long press REC button to start recording.

#### Illustration of recording interface:



Record icon Voice mode Current file The total files of the current directory Record status Battery Lock status Status indicator Volume Voice folder

# Record type Bit rate Current duration of recording

### - Note

 When the low battery icon occurs, it means the battery is nearly empty and the system will automatically shut down. If the device is recording, the system will automatically save the recorded file then shut down. If the device has low battery, please recharge promptly.
 When the device is to shut down due to low battery, the following icon will display.



## - Note

- Prior to recording, please preset the recording format you need (See "Quality settings" in System settings, chapter 7.1, page 34.) and the folder where you want to save recorded files (See "Voice folder selection" in the Voice & music mode, chapter 6, page 31).
- Check if the remaining recording time is sufficient for the next recording (See "Remaining recording time" in The System setting, chapter 7.13, page 39).
- When recording, press ▼ button to save the current recording and start the next recording.
- Please test recording to ensure that the Voice Tracer setting is right.
- A/B/C and D folder can store 99 files at most, with 396 files in total (99  $\times$  4).
- If the recording time exceeds the usable capacity of the device or the number of files reaches the limit of 396, the recording stops. Please delete part of recording or move it to a computer.
- When the device is in the recording mode, please do not slide power switch to OFF, otherwise the current recoding files will be damaged.

### 6 Voice & music mode

- Voice mode: the device will display DVR when it's playing recorded documents;
- Music mode: the device will display MUSIC when it's playing music documents;
- The two modes can be switched through short-pressing menu button.
- Return to voice mode by short pressing stop button or long pressing menu button in the settings interface.



Interface of playing files

1 Play mode

4

- 2 Replay mode
- 3 Current file
  - The total files of the current directory
- S Current time
- 6 Total time

7 Battery
 8 Voice mode
 9 Status indicator
 10 Volume
 11 Voice folder
 12 Current file

### 6.1 Basic operations

- 1 In stop state, press STOP button (■) to select voice folder, A-B-C-D-MUSIC-A...
- 2 Press  $\blacktriangle$  or  $\blacksquare$  to select the file you want to play.
- 3 Press "PLAY"(►||) to play and press "PLAY"(►||) to stop the playing.
- 4 When playing, press ▲ or ▼ to fast forward or backward, release the button to resume playing.
- 5 Press"STOP"( ) to end the playing.

#### 6.2 Delete





Delete all files in the folder



Figure 1

6.3 A-B Replay

A - B

Figure 2

- 1 In stop state, long press "STOP"button for 2 to 3 seconds to enter delete interface;
- 2 Press "PLAY"() to choose "Delete one" or "Delete all";
- 3 Press ▲ or ▼ to choose"YES"or"NO";

4 Press "MENU" to confirm.

Delete current file

- When playing, short press VOL button to enter A-B replay mode, and set the start mark A, then the screen displays A-B, and B flashes as shown in Figure 1;
- 2 Short press VOL button to set the finish mark B, screen displays A-B, and start to replay as shown in Figure 2;
- 3 Repress the VOL button again to cancel replay, display A-B disappears and return to normal playing (if not press VOL button to cancel replay, device will automatically exit replay mode after replay for five times).

### 6.4 Play mode

The device supports three play modes, including Sequence, Repeat one and Repeat all. It is able to switch among those three play modes by pressing MENU button when playing.

Sequence, it means to play in the order that from the current file to the last one, and then it automatically stops playing.

C:D:Repeat one, it means to repeatedly play the current file only.

(ALL):Repeat all, it means to play all files in the current folder repeatedly.

#### 6.5 Volume adjustment



1 Long press VOL button to enter volume adjustment, with screen displaying a speaker icon flashing, as shown in the

following figure.

2 Press button ▲ or ▼ to turn up or turn down the volume, then the volume bar on the screen will correspondingly increase or reduce.

#### 6.6 Equalizer Mode (for music mode)

The device supports seven sound effect modes, including normal, rock, popular, classic, soft, and jazz and DBB. Long press STOP key for 2-3 seconds to switch among them when playing.

Icon	Sound Effect
	Normal
(2003)	Rock
FOR	Popular
(CLS)	Classic
	Soft
<b>E</b> .24	Jazz
(C68)	DBB

### 7 System settings

- 1 In the stop state of music mode, long press "MENU" to enter system settings.
- 2 Return to voice mode interface by pressing "STOP" button from any system menu interface.

Menu	Submenu				
Quality settings	HQ	LP	NR		
Record light	On	Off			
Key tone	On	Off			
Voice-activation	On	Off			
Auto divide feature recording	Off	30m	60m		
Set date & time	I 2h	24h			
Recorder timer					
Duration	0m	30m	60m	120m	
Language	S-C	T-C	EN		
Backlight time	Off	15s	30s	45s	60s
Display contrast			1-9		
Auto power-off	5m	15m			
Remaining recording time					
Format memory	yes	no			
Information					

### 7.1 Quality settings

 In the stop interface of music mode or voice mode, long press MENU button to enter quality settings Interface as shown in the following figure:



- 2 Three types of recording are available: high-quality recording, long-time recording and noise reduction recording. Press ♥ or ▲ to select the one you prefer.
- HQ: MP3 format, high quality, with bit rate of 128kbps. LP: MP3 format, long time, with bit rate of 8kbps. NR: WAV format, high quality, with bit rate of 384kbps.
- 3 Press MENU to confirm and enter the next menu.

### 7.2 Record light

1 Short press MENU button to enter record light setting interface, as below:



- 2 Press ▲ or ▼ to select "On" or "Off".
- 3 Press MENU to confirm and enter the next menu.

#### 7.3 Key tone

1 Short press MENU button to enter device sounds setting interface, as shown in the following figure:



2 Press ▲ or ▼ to select "On" or "Off".

3 Press MENU to confirm and enter the next menu.

#### 7.4 Voice-activated recording

1 Short press the MENU to enter voice-activated settings interface, as shown in the following figure:



2 Press ▲ or ▼ to select "On" or "Off",

- if voice-activated recording is enabled, recording session will start when you begin speaking.
- when you stop speaking, the device will automatically pause recording after three seconds of silence, and resume only when you begin speaking again.

3 Press MENU to confirm and enter the next menu.

#### 7.5 Auto divide recording

You can automatically divide large recordings, such as a multihour meeting recording. Once the set time has been reached, the device stops the current recording and automatically starts a new one.

1 Short press on the MENU to enter the auto divide feature recording setting interface, as shown in the following figure:



- Press ▲ or ▼ to select preset auto divide time : "Off", "30min" and "60min".
- 3 Press MENU to confirm and enter the next menu.

#### 7.6 Set date & time

1 Short press on the MENU to enter the time format setting interface, as shown in the following figure:



2 Press ▲ or ▼ to select "12H" or "24H" format.

figures:

3 Press MENU to confirm and enter the system time setting interface, as shown in the following figures:



- 4 In this state, press VOL to switch among the year, month, date, hour, minute and second. The number will flash in the state of setting, press ▲ or ▼ to adjust the numerical value.
- 5 Press MENU to save the current time/date settings and enter the next menu.

#### 7.7 Record timer

You can use this function to start a recording at a specified date and time. Short press the MENU button as shown in the following



The setting method refers to "Set date & time".

#### 7.8 Duration

It is used to set time duration of auto recording. Device will automatically save recording when reachs the preset time.

1 Short press on the MENU to enter the duration setting, as shown in the following figures:



2 Press ▲ or ▼ to select "5m" or "15m".

3 Press MENU to confirm and enter the next menu.

1 Short press on the MENU to enter the auto power-off setting, as shown in the following figures:

#### 7.13 Remaining recording time

1 It is be used for check remaining time for recording.

- 2 To enter the remaining time checking interface,
  - short press the MENU, as shown in the following figures:

- Press ▲ or ▼ to select "Simplified Chinese" (S-C), "Traditional Chinese" (T-C) or "English" (EN).
- 3 Press MENU to confirm and enter the next menu.

#### 7.10 Display backlight

1 Short press on the MENU to enter the backlight time setting, as shown in the following figures:



2 Press ▲ or ▼ to select "Off", "15s", "30s", "45s" and "60s".

3 Press MENU to confirm and enter the next menu.

#### 7.11 Display contrast

1 Short press on the MENU to enter the contrast setting interface, as shown in the following figures:



2 Press ▲ or ▼ to adjust numerical value.

3 Press MENU to confirm and enter the next menu.

#### 7.12 Auto power-off

The device switches off automatically if no key is pressed within a preset period of time. This saves power.

cm 120m Duration

2 Press ▲ or ▼ button to select "0 m"(to disable auto save), "30 m"(to auto save at a 30 min interval), "60 m"(to auto save at a 60 min interval), "120 m"(to auto save at a 120 min interval), press MENU to confirm and enter the next menu.

#### 7.9 Language

It is used for setting the system language.

1 Short press on the MENU to enter the language setting interface, as shown in the following figures:



• Different record types vary in remaining time.

#### 7.14 Format memory

It is used for formatting the internal storage of the device.

Ē

0046h

Remainin

### - Note

- Prior to formatting, please backup important data or files in advance.
- 1 Short press on the MENU to enter the clear memory interface, as shown in the following figures:



2 Press ▲ or ▼ to select "Yes" or "No".

3 Press MENU to confirm the formatting,

- when you selecting "YES";
- if press MENU with "No", it will cancel the formatting and enter the next menu.

-

#### 7.15 Information

It is used for checking the version of firmware and the date.

- 1 To enter the firmware version checking interface,
- on the stop interface of music mode, consecutively short press on the MENU as shown in the following figures:



#### 2 Press MENU to return to the voice mode.

### 8 Frequently asked questions (FAQ)

Answers to the frequently asked questions are listed here to solve simple problems that may occur. If the problem cannot be solved, please contact the dealer or visit our official website: www.philips.com/support

#### **Cannot switch on the device**

The battery is empty, please recharge promptly.

#### **Cannot record with the device**

Exceed the maximum file number or the device's storage is full, Please delete some recordings or move them to other storage devices.

#### Voice Tracer fails to play

Please recharge the battery as it has run out power.

#### Unable to listen to recording via speaker

- 1 Please unplug the headset.
- 2 Adjust the volume of speaker as the volume may have been set at the minimum value.

### 9 Technical parameter

#### Memory

Reference recording time (8GB): About 48 hours for digital noise reduction recording mode , 136 hours for high quality recording mode and 2160 hours for long time recording mode.

Type of internal memory: NAND Flash (flash memory) Mobile storage device (PC): Yes Recording time with fully charged battery: approx 12 hours

#### **Dimensions**

Product dimensions (W × D × H): 22.7×97.6×14.8 mm Weight (including battery): 40 g

#### System requirements

Operating System: Windows 7/Vista/XP/2000, Mac OS X, Linux Port: USB port

#### Recording

Recording format: (High quality) HQ: Bit rate 128kbps, MP3 format (Long time) LP: Bit rate 8kbps, MP3 format (Digital noise reduction) NR: Bit rate 384kbps, WAV format

#### **Operational condition**

Temperature:  $5^{\circ} - 45^{\circ}C$ Air humidity: 10% - 90%, non-condensing